


**Use:**

The cabinet is used for drying wet clothes and boots.

Model	Chosen
SSBIU 1650	

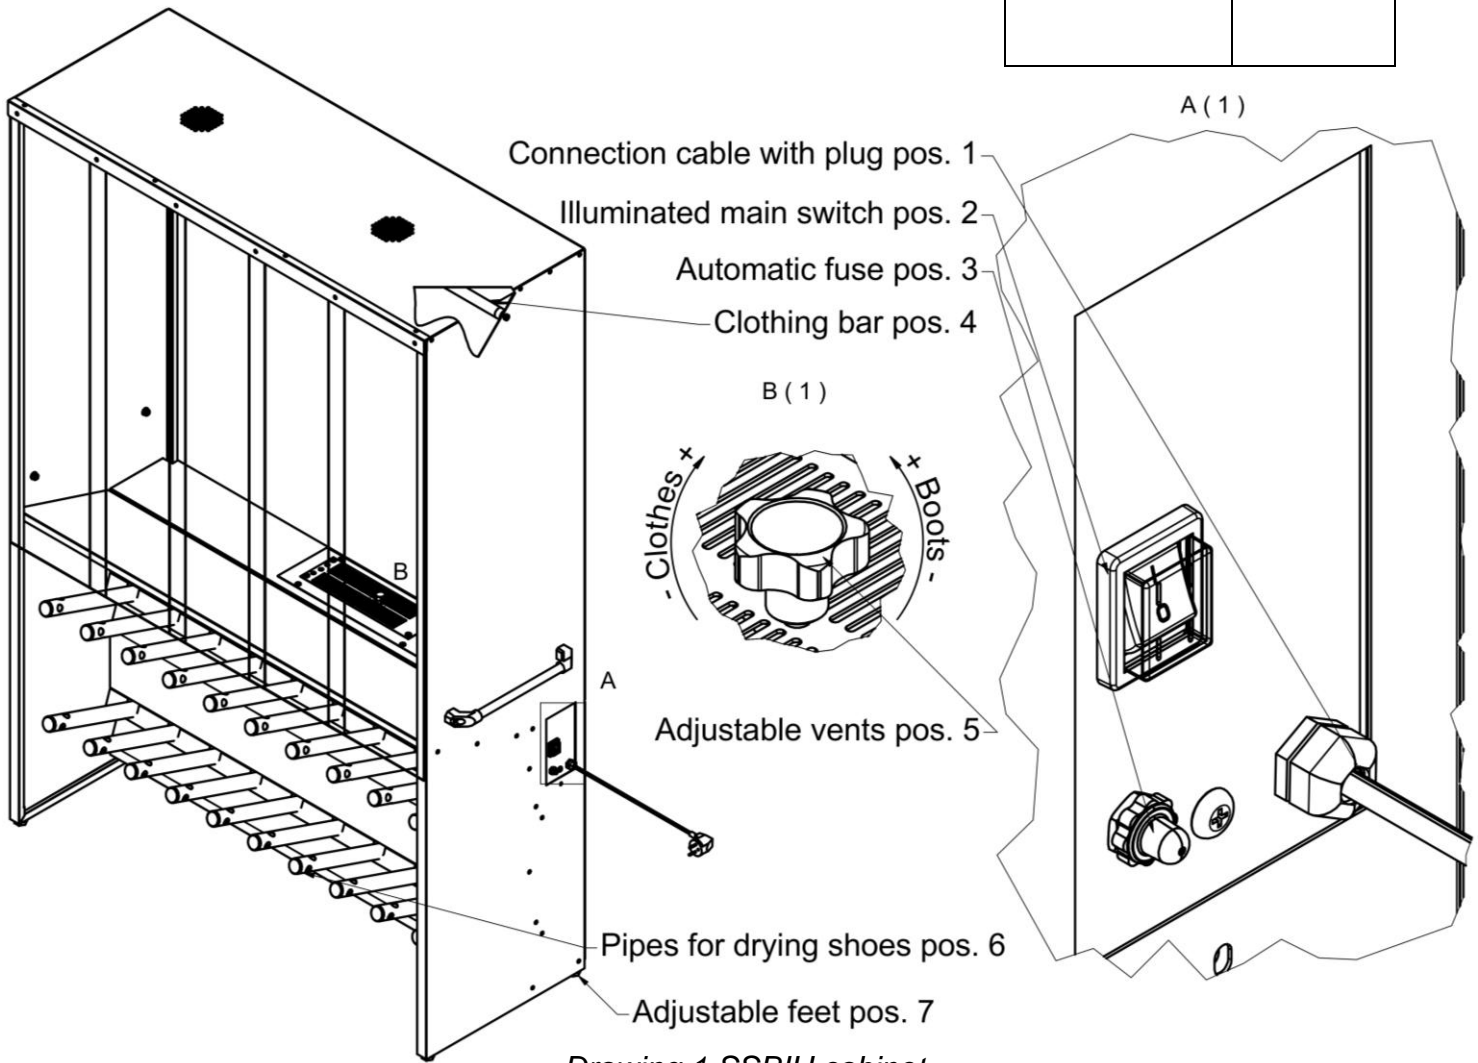

*Drawing 1 SSBIU cabinet*

**Operating conditions:**

1. This equipment can be used by children at the age of at least 8 years and by person with reduced physical and mental abilities and a person with no experience and knowledge of the equipment, if supervision or instructions regarding the use of the equipment are provided in a safe way that all the negative consequences are understood. Children shouldn't be playing with the equipment. If there is not suitable supervision, children should not perform cleaning and maintenance of equipment.
2. If the non-detachable power cord is damaged, it should be replaced by the manufacturer or a service center employee or by a qualified person in order to avoid any risk.
3. Before moving the cabinet, make sure that the cabinet is empty. Move at least by 2 people, place the cabinet on an even floor and level with screw-in feet (fig. 1 item 7).
4. If you notice damage to the device, wires or housing, immediately disconnect the device from the power supply and stop using it.
5. All repairs should only be carried out by the manufacturer's service or by qualified personnel. It is forbidden to manipulate and make changes to components and electrical connections In the product.

6. Connect the plug of the connection cable only to the supply installation equipped with a protective contact and overload and short-circuit protection as well as a residual current circuit breaker with a rated residual current  $\leq 30$  mA.
7. The total electrical load must not exceed 8 A, exceeding the maximum current may cause protection of the cabinet (Figure 1 item 3) and / or protection of the facility's electrical installation. In the case of the above-mentioned protection, it is necessary to switch off the cabinet and reset it by pressing the button of the automatic fuse located on the cabinet until it is clicked.
8. Triggering of a protection may be caused by a device failure (see point 4 - 5)
9. To start the drying process, switch on the fan by the switch (fig. 1 item 2), the on position will be signaled by the backlight and fan sound
10. The complete drying cycle takes about 5 hours and 10 minutes.
  - a) 5 hours after switching on, heating and ventilation are in progress,
  - b) The next 10 minutes only ventilation works without heating
  - c) Then the cabinet stops working.
11. The restart will take place after pressing the fan switch (fig. 1 item 2) and repeating the step from point. 8 or after a temporary power failure.
12. Before starting the drying cycle, make sure that there are no animals or unnecessary items inside.
13. The knob (Fig. 1 item 5) is used to adjust the air flow direction. The adjustment range is possible in the range of 20-80%. Do not use force at extreme positions.
14. Maintenance and servicing of the cabinet should be carried out with the power supply switched off. To clean the locker do not use strong or abrasive detergent. Use a dry or slightly damp cloth.
15. Do not put a wet suit to the cabinet (from which water leaks).
16. Do not cover the ventilation openings inside and at the back of the cabinet.
17. Depending on the environmental conditions, the cabinet can produce noise of about 65dB and warm up to a temperature of about 40 °C
18. Do not expose your furniture to weather conditions (rain, sun, etc.). The locker is intended for use in a dry and closed room.
19. Maximum load capacity of the shelf is 30 kg.
20. Worn device should be safely disposed of

### Technical data:

1. Fan - 230 V, 50 Hz, 155 W, 705 m<sup>3</sup>/h.
2. Heater - 230 V, 50 Hz, 1500 W.
3. Connection cable with earthed plug 230 V, 16 A (drawing 1 pos. 1).
4. Switch with backlight 230V 16A. (drawing. 1 pos. 2).
5. Automatic thermal fuse 230 V 8 A (drawing 1 pos. 3).
6. 2 Time relays with factory setting 5h and 10min. 230 V, 50 Hz, 16 A.
7. Rated power of the cabinet is 1650 W.
8. Dimensions (width, height, depth) 1420 x 1970 x 534 mm